

Xerox eConcierge® Supported Products List

UPDATED MARCH 2017

The free Xerox eConcierge® program is the quickest, easiest way to order printer supplies. To download the Supplies Assistant desktop application see your local Xerox Provider.

FREE LIFETIME SERVICE COVERAGE

To qualify, simply use the Xerox eConcierge® service for a minimum of 30 days and with your second supplies purchase for each eligible Xerox® product, its free lifetime service coverage will begin.

Xerox will continue to provide free lifetime service coverage, over the normal supported life of each eligible Xerox® product as long as you continue placing your supplies orders through the Xerox eConcierge® service. The coverage is the same as that provided when the device was originally shipped — quick exchange, depot repair or onsite. Eligible products include all of the Xerox® printers and MFPs noted below. Xerox reserves the right to discontinue the service coverage for a specific model at any time.

XEROX® DEVICES

| PRINTERS AND MULTIFUNCTION PRINTERS | SERVICE REWARD |
|-------------------------------------|----------------|
| Xerox® ColorQube® 8570 | Yes¹ |
| Xerox® ColorQube® 8580 | Yes¹ |
| Xerox® ColorQube® 8700 | Yes¹ |
| Xerox® ColorQube® 8870 | Yes¹ |
| Xerox® ColorQube® 8880 | Yes¹ |
| Xerox® ColorQube® 8900 | Yes¹ |
| Xerox® Phaser® 3250 | Yes |
| Xerox® Phaser® 3260 | Yes |
| Xerox® Phaser® 3300MFP | Yes |
| Xerox® Phaser® 3320 | Yes |
| Xerox® Phaser® 3330 | Yes |
| Xerox® Phaser® 3600 | Yes |
| Xerox® Phaser® 3610 | Yes |
| Xerox® Phaser® 3635MFP | Yes |
| Xerox® Phaser® 4500 | Yes |
| Xerox® Phaser® 4510 | Yes |
| Xerox® Phaser® 4600 | Yes¹ |
| Xerox® Phaser® 4620 | Yes¹ |
| Xerox® Phaser® 4622 | Yes¹ |
| Xerox® Phaser® 5500 | Yes |
| Xerox® Phaser® 5550 | Yes |
| Xerox® Phaser® 6010 | Yes |
| Xerox® Phaser® 6022 | Yes |
| Xerox® Phaser® 6125 | Yes |
| Xerox® Phaser® 6128MFP | Yes |
| Xerox® Phaser® 6130 | No |
| Xerox® Phaser® 6140 | Yes |

| PRINTERS AND MULTIFUNCTION PRINTERS | SERVICE REWARD |
|-------------------------------------|----------------|
| Xerox® Phaser® 6180 | Yes |
| Xerox® Phaser® 6180MFP | Yes |
| Xerox® Phaser® 6250 | No |
| Xerox® Phaser® 6280 | Yes |
| Xerox® Phaser® 6300 | No |
| Xerox® Phaser® 6350 | No |
| Xerox® Phaser® 6360 | Yes¹ |
| Xerox® Phaser® 6500 | Yes |
| Xerox® Phaser® 6510 | Yes |
| Xerox® Phaser® 6600 | Yes¹ |
| Xerox® Phaser® 6700 | Yes¹ |
| Xerox® Phaser® 7100 | Yes¹ |
| Xerox® Phaser® 7400 | Yes¹ |
| Xerox® Phaser® 7500 | Yes¹ |
| Xerox® Phaser® 7750 | No |
| Xerox® Phaser® 7760 | Yes¹ |
| Xerox® Phaser® 7800 | Yes¹ |
| Xerox® Phaser® 8500 | No |
| Xerox® Phaser® 8550 | No |
| Xerox® Phaser® 8560 | Yes¹ |
| Xerox® Phaser® 8560MFP | Yes¹ |
| Xerox® Phaser® 8860 | Yes¹ |
| Xerox® Phaser® 8860MFP | Yes¹ |
| Xerox® VersaLink® B400 | Yes¹ |
| Xerox® VersaLink® B405 | Yes¹ |
| Xerox® VersaLink® C400 | Yes¹ |
| Xerox® VersaLink® C405 | Yes¹ |
| Xerox® WorkCentre® 3210 | Yes |
| Xerox® WorkCentre® 3215 | Yes |
| Xerox® WorkCentre® 3220 | Yes |
| Xerox® WorkCentre® 3225 | Yes |
| Xerox® WorkCentre® 3315 | Yes |
| Xerox® WorkCentre® 3325 | Yes |
| Xerox® WorkCentre® 3335 | Yes |
| Xerox® WorkCentre® 3345 | Yes |
| Xerox® WorkCentre® 3550 | Yes |
| Xerox® WorkCentre® 3615 | Yes |
| Xerox® WorkCentre® 3655 | Yes |
| Xerox® WorkCentre® 4150 | Yes |
| Xerox® WorkCentre® 4250 | Yes |
| Xerox® WorkCentre® 4260 | Yes |
| Xerox® WorkCentre® 4265 | Yes |
| Xerox® WorkCentre® 6015 | Yes |
| Xerox® WorkCentre® 6027 | Yes |
| Xerox® WorkCentre® 6400 | Yes¹ |
| Xerox® WorkCentre® 6505 | Yes |
| Xerox® WorkCentre® 6515 | Yes |
| Xerox® WorkCentre® 6605 | Yes¹ |
| Xerox® WorkCentre® 6655 | Yes¹ |
| Xerox® WorkCentre® M20i | Yes |



NON-XEROX® DEVICES

| MANUFACTURER | MODEL |
|--------------|--|
| Samsung | CLP-310 Series |
| Samsung | CLX-6200 Series |
| Samsung | ML-2850 Series |
| Samsung | ML-2855 Series |
| Samsung | ML-3050 Series |
| Samsung | SCX-4623 |
| Samsung | SCX-4x28 Series |
| Samsung | SCX-5635 Series |
| Lexmark | C540 ¹ |
| Lexmark | C782 |
| Lexmark | C792 ¹ |
| Lexmark | C925 ¹ |
| Lexmark | E120 ¹ |
| Lexmark | E260 |
| Lexmark | E360 |
| Lexmark | E460 |
| Lexmark | T640 |
| Lexmark | T642 |
| Lexmark | T654 |
| Lexmark | X364 ¹ |
| Lexmark | X466 ¹ |
| Lexmark | X738 ¹ |
| Lexmark | X792 |
| HP | Color LaserJet 2500 [†] |
| HP | Color LaserJet 2840 [†] |
| HP | Color LaserJet 3000 |
| HP | Color LaserJet 3600 [†] |
| HP | Color LaserJet 3800 [†] |
| HP | Color LaserJet 4600 [†] |
| HP | Color LaserJet 4650 [†] |
| HP | Color LaserJet 4700 [†] |
| HP | Color LaserJet 5550 [†] |
| HP | Color LaserJet 9000 Series |
| HP | Color LaserJet 9500 |
| HP | Color LaserJet CM1017 [†] |
| HP | Color LaserJet CM1312 [†] |
| HP | Color LaserJet CM2320fxi |
| HP | Color LaserJet CM3530 [†] |
| HP | Color LaserJet CM4540 MFP ¹ |
| HP | Color LaserJet CM4730 |
| HP | Color LaserJet CM6030 |
| HP | Color LaserJet CP1515 [†] |
| HP | Color LaserJet CP1518ni [†] |
| HP | Color LaserJet CP2025 [†] |
| HP | Color LaserJet CP3505 [†] |
| HP | Color LaserJet CP3525 [†] |
| HP | Color LaserJet CP4005 [†] |
| HP | Color LaserJet CP4020 Series |
| HP | Color LaserJet CP4520 Series |
| HP | Color LaserJet CP5225 |
| HP | Color LaserJet CP5520 Series |
| HP | Color LaserJet CP6015 [†] |
| HP | Color LaserJet Pro M276 [†] |
| HP | Color LaserJet Pro M375 [†] |
| HP | Color LaserJet Pro M451 [†] |
| HP | Color LaserJet Pro M570 [†] |

| MANUFACTURER | MODEL |
|--------------|------------------------------------|
| HP | LaserJet 1160 |
| HP | LaserJet 1320 [†] |
| HP | LaserJet 2300 [†] |
| HP | LaserJet 2420 [†] |
| HP | LaserJet 3390 [†] |
| HP | LaserJet 4050 Series [†] |
| HP | LaserJet 4100 Series |
| HP | LaserJet 4200 [†] |
| HP | LaserJet 4240 |
| HP | LaserJet 4250 [†] |
| HP | LaserJet 4300 |
| HP | LaserJet 4345 [†] |
| HP | LaserJet 4350 |
| HP | LaserJet 5200 [†] |
| HP | LaserJet 8100 Series |
| HP | LaserJet 8150 Series [†] |
| HP | LaserJet 9040 |
| HP | LaserJet 9050 [†] |
| HP | LaserJet M1522 [†] |
| HP | LaserJet M1536 |
| HP | LaserJet M2727 [†] |
| HP | LaserJet M3027 |
| HP | LaserJet M3035 |
| HP | LaserJet M4345 |
| HP | LaserJet M4555 [†] |
| HP | LaserJet M5025 |
| HP | LaserJet M5035 |
| HP | LaserJet P1505 [†] |
| HP | LaserJet P2015 |
| HP | LaserJet P2035 |
| HP | LaserJet P2055 [†] |
| HP | LaserJet P3005 [†] |
| HP | LaserJet P3010 Series [†] |
| HP | LaserJet P4014 |
| HP | LaserJet P4015 [†] |
| HP | LaserJet P4515 [†] |
| HP | LaserJet Pro CM1415 |
| HP | LaserJet Pro CP1025 |
| HP | LaserJet Pro CP1525 [†] |
| HP | LaserJet Pro M401 [†] |
| HP | LaserJet Pro M425 [†] |
| HP | LaserJet Pro M1212 |
| HP | LaserJet Pro P1102w [†] |
| HP | LaserJet Pro P1606 [†] |
| Brother | HL-3040 ¹ |
| Brother | HL-3070 ¹ |
| Brother | HL-4040 ¹ |
| Brother | HL-5370 ¹ |
| Brother | MFC-7440 |
| Brother | MFC-8690 ^{1†} |
| Brother | MFC-8890 |
| Brother | MFC-9010 ¹ |
| Brother | MFC-9440 ¹ |
| Brother | MFC-9460 ¹ |
| Brother | MFC-9840 ¹ |
| Brother | MFC-9970 ^{1†} |

Note: MFP = Multifunction printer

When Xerox eConcierge® devices reach end of support or service, they are no longer eligible to receive the free service reward.

¹Some non-toner supplies for this product are not monitored. For a complete list of supplies, refer to the Device Details in the Supplies Assistant desktop application. Check the device's front panel for the status of supplies not monitored by the Supplies Assistant. Purchase of non-monitored supplies through the Xerox eConcierge service does not affect the status of service rewards on eligible Xerox® products.

[†]Xerox compatible replacement cartridges available.

©2017 Xerox Corporation. All rights reserved. Xerox®, Xerox and Design®, Xerox eConcierge®, Phaser®, ColorQube®, and WorkCentre® are trademarks of Xerox Corporation in the U.S. and/or other countries. BR21288 ECOFS-02UE

